


Getting Started

With C-Pen Reader 2™


01

Press and hold "Power" for 3 seconds to turn on.

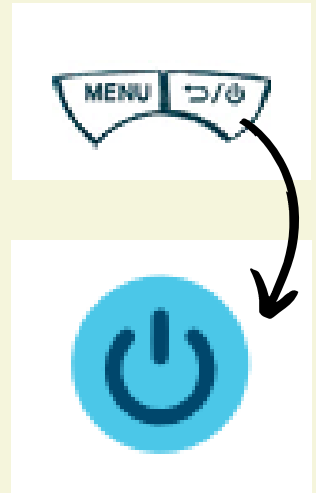


02

Reader, Dictionary and Recorder options are visible.

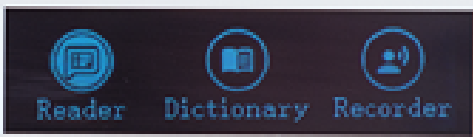






03


Press the return arrow to access other options, including Settings.

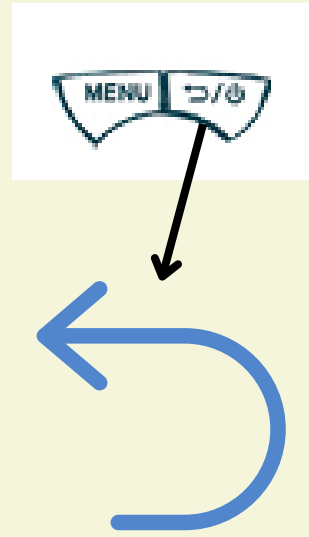

04

For a Quick Set Up, click "Settings", followed by "Run Wizard", then "Talking Menu" and select "On" to have all steps read aloud.

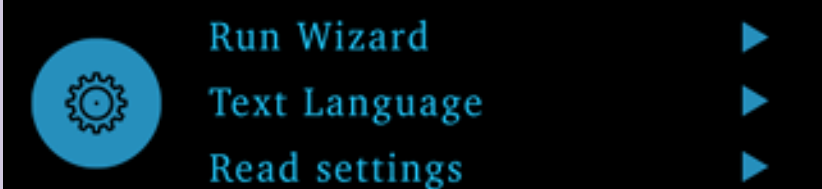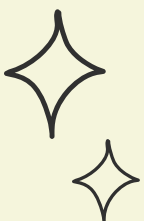



05

Use the arrow buttons to scroll to the English/French/Spanish options and press the centre square button to select the language. You can then scan your chosen language and choose Select Voice for different accents . Use the arrow and select buttons to navigate.

↕ Arrow buttons

□ Choose


06

You can also select to use the pen Left or Right handed.



07

You'll be prompted then to select your dictionary language between English, French and Spanish. If you select English, you can choose between Oxford Primary Dictionary (good basic definitions) and Collins Dictionary (more complex definitions).

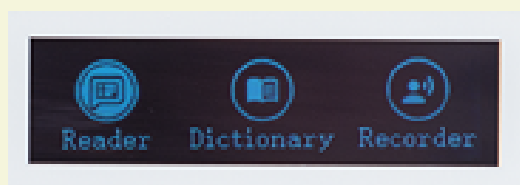


08

Next, you'll be asked to choose your reading settings.
Set Auto Read On / Off.
Set Speed between 6-10.
Set Volume between 9-10.
Set Word Pause between 0-5.
Set Punctuation Pause between 0-5.



09

"The Wizard has been finished" will appear when all steps have been completed.

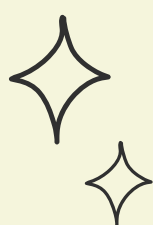

Graphics Copyright © 2023.
Scanning Pens. All Rights Reserved. Version 23.0




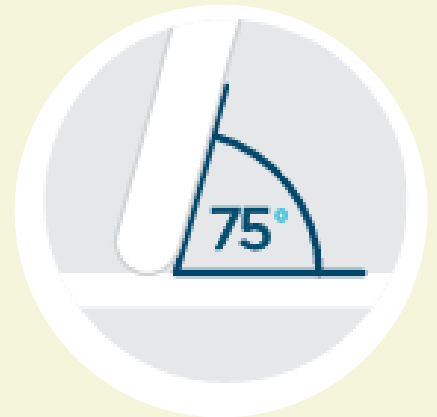
Scanning Tips and Techniques




C-Pen Reader 2™




- 
- The pen will not work with handwritten text, only printed text.
 - Hold the reader pen, like a regular pen, almost straight up.
 - No need to press any buttons.




- 
- Scan the pen across the text.
 - Make sure the text to be read is on a flat surface.
 - Move the pen at a steady pace, not too fast or too slow.
 - Don't push the pen too hard.



- 
- The pen will light up when it touches paper.
 - Start moving the pen along the text line as soon as the scan light starts up.
 - The reader pen will start scanning the words, one at a time.



- 
- The reader pen can be set to read text automatically when scanned or press the centre square button to start the read aloud.
 - To learn the meaning of a word, select the word and press the MENU button and select Definition.

